



## Air Temperature Sensor

### Part #'s 52-1225 thru 52-1232

5V maximum input voltage

32 cells are calculated, for 16 or 8 cell input, use every other, or fourth cell as necessary

F°	Ω
-20	26,640
-10	19,373
0	14,284
10	10,670
20	8,068
30	6,170
40	4,770
50	3,725
60	2,936
70	2,336
80	1,874
90	1,515
100	1,235
110	1,014
120	838
130	697
140	583
150	491
160	415
170	353
180	302
190	260
200	224
210	194
220	169
230	148
240	130
250	114
260	101
270	90
280	80
290	71